

APPENDIX A

ALPHABETICAL INDEX

<i><u>Figure</u></i>	<i><u>Title</u></i>	<i><u>Page</u></i>
—	Alphabetical Index	A3

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
2000-Hour Maintenance and Inspection Kit	99.1	Arm Assembly – Door Vent	52.2	Bow Assembly – Windscreen	52.18
Accessory Bars Installation	96.27	Arm Assembly – Aft Monitors, ENG	92.21	Bowl Assembly – MRGB Oil Filter	63.13
Accessory Mount	96.27	Attitude Indicator	95.36	Brace – Heated Pitot	95.51
Actuator Assembly	76.7	Audio Control	90.25	Brace – Autopilot	22.1
ADF Antenna	97.65	Audio Control	97.25	Brace – Autopilot	22.5
ADF Indicator	97.65	Audio Control	97.31	Bracket – ELT	25.23
Aft Console	90.79	Audio Control	97.49	Bracket – Aspen PFD	95.17
Air Conditioning System	21.3	Audio Control Panel	90.7B	Bracket – Aspen PFD & MFD	95.21
Air Data Computer	97.5	Audio Control Panel	90.9	Bracket – Droop Stops	62.3
Air Filter Assembly	71.9	Audio Panel	92.61	Bracket – Fire Extinguisher	25.21
Airspeed Indicator	95.1	Audio Panel	92.65	Bracket – Hall Effect Sender	29.1
Airspeed Indicator	95.28	Auxiliary Box Assembly	92.33	Bracket – Map Light/ Spot Light	33.9
Airspeed Indicator	95.35	Auxiliary Fuel Tank – Large	28.13	Bracket – Rotor Brake	21.25
Air Temperature Gage	95.2	Auxiliary Fuel Tank – Small	28.23	Bracket – Spidertracks	97.69
AIS-380 Adapter	71.27	Back Rest Assembly	25.1	Bracket Assembly – IBF Gage	71.12
Altimeter	95.1	Balance Strip	62.1	Bracket Assembly – Magnetometer	97.13
Altimeter	95.28	Ball – Fuel Bladder Vent	28.1	Bracket Assembly – Rotor Brake	63.9
Altimeter (feet/Millibar)	95.35	Ball – Ground Handling	9.9	Bubble Cover	10.3
Altimeter (in.-Hg)	95.35	Ball Assembly – Swashplate	67.45	Buckle Assembly	25.3
Altitude and Heading Reference System (AHRS)	97.9	Ballast – HID Landing Lights	33.7	Buckle Assembly	25.5
Ammeter	95.2	Ballast Plates	8.1	Bus Bar	96.21
Ammeter	95.31	Battery – 9-volt, Alkaline	96.11	Cabin Heat System	21.31
Ammeter	95.40	Battery – Lithium-Ion	96.9	Cable – ELT Antenna	25.23
Amplifier	90.31	Battery – RG24-20	96.1	Cable Assembly – Battery	96.1
Amplifier	92.58	Battery – RG-325	96.3	Cable Assembly – Battery	96.3
Anchor – Five-point Harness)	25.9	Battery Relay	96.5	Cable Assembly – Battery	96.9
Annunciator Panel – Warning Lights	95.27	Battery Tray	96.1	Cage Assembly – Air Filter	71.9
Annunciator Panel – Warning Lights	95.35	Battery Tray	96.3	Cage Assembly – IBF	71.11
Antenna – AM / FM	6.23	Bearing – Coning	62.3	Cage Assembly – IBF	71.15
Antenna – COM	6.23	Bearing – Teeter	62.3	Call Letters Plate	95.28
Antenna – COM	6.31	Bearing Block Set	67.29	Call Letters Plate	95.36
Antenna – COM/GPS	6.31	Bellcrank	67.33	Camera – ENG	92.5
Antenna – COM/GPS	6.33	Bellcrank	67.5	Camera – ENG	92.7
Antenna – DME	6.17	Bellcrank Assembly	65.9	Camera – ENG	92.9
Antenna – FM	6.21	Bellcrank Assembly	67.35	Camera – ENG	92.27
Antenna – FM	6.23	Bellcrank Assembly	67.37	Cap – Aux Fuel Cell	28.16
Antenna – FM	6.31	Bellcrank Assembly	67.39	Cap – Fuel Cell	28.1
Antenna – FM	6.33	Bellcrank Assembly	76.7	Cap – Landing Gear	32.1
Antenna – FM	6.35	Belleville Washer	67.22	Cargo Hook	25.27
Antenna – FM	92.43	Belleville Washer	92.53	Carpet Assembly	25.15
Antenna – Glideslope	6.43	Bellmouth	71.17	Cartridge – Main Rotor Gearbox	63.5
Antenna – GPS	6.27	Bezel	33.7	Case Assembly – Battery	96.11
Antenna – GPS	90.73	Bladder	28.5	Charger – NiMH Battery (110V)	18.1
Antenna – Marker Beacon	6.15	Bladder	28.15	Check Valve	79.9
Antenna – NAV	6.37	Bladder Assembly	28.1	Chin	52.18
Antenna – Transponder	6.19	Blade Assembly	62.1	Chip Detector	63.4
Antenna – Transponder	92.41	Blade Assembly	64.1	Chip Detector	65.9
Antenna – UHF	6.17	Blind Encoder	97.31	Chronometer Assembly	95.40
Antenna – UHF	92.43	Blind Encoder	97.63	Circuit Breaker Panel – ENG	92.17
Antenna – VHF	6.31	Block – Hardpoint	10.5	Circuit Breaker Panel – Police	90.55
Antenna – VHF	6.33	Blower – Radio Rack	90.15	Circuit Breaker Panel – Standard	96.21
Antenna – VHF	6.35	Blower Assembly – Air Conditioning	21.11	Clear Coat – Touch Up Paint	12.4
Arm – Heater Control Valve	21.35	Bolt – Main Rotor Hub	62.3	Clevis – Aft Servo	29.11
Arm – Damper Bearing	65.7	Boot – Cyclic	67.1	Clevis – Forward Servo	29.7
Arm – Door Vent	52.8	Boot – MR Spindle, Gray	62.1	Clock Assembly – Analog	95.2
		Boot – MR Spindle, Black	62.1	Clock Assembly – Analog	95.28
		Boot Assembly – Collective	6.1	Clock Assembly – Digital	95.40

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Clutch Assembly	63.1	Cradle Assembly – Blade Support . .	10.7	Enclosure Assy. – Radar Altimeter . .	97.17
Combiner	6.39	Cradle Assembly – Helium Cylinder	32.7	Enclosure Assembly – Aux Tank . . .	28.15
Compass Assembly – Vertical Card	95.45	Cradle Assembly – Helium Cylinder	32.15	Engine	71.1
Compass Assembly	95.45	Cross Tube (aft)	32.1	Engine Cowling Assembly	53.1
Compressor Assembly	21.3	Cross Tube (forward)	32.1	Engine Monitoring Unit	71.25
Computer	90.69	Cyclic Box Assembly	67.1	Engine Oil	12.1
Computer	90.70	Cyclic Control Assembly	67.1	Engine Torque Meter	95.1
Computer	90.71B	Cyclic Friction Assembly	67.19	Engine Torque Meter	95.28
Computer	90.75	Cyclic Stick Assembly	22.1	Engine/Rotor Tachometer	95.35
Condenser	21.7	Cylinder Assembly	32.7	Evaporator Assembly	21.11
Configuration Module	95.21	Dam – Static Port	95.52	Exhaust Weldment	71.19
Connecting Rod	67.21	Damper Assembly	65.7	Fairing	90.17
Console Assembly	90.51	Deflector	53.31	Fairing	92.29
Console Assembly	90.79	Desiccant Bag	21.8	Fairing Assembly – Aft	32.5
Console Assembly	95.43	Deviation Placard – Vertical Card		Fan	90.53B
Console Assembly	97.1	Compass	95.45	Fan	97.41
Control – Fuel Cutoff	76.1	Diode Assembly – Battery Relay . .	96.5	Fan	97.45
Control – Fuel Valve	28.9	Diplexer	6.39	Fan Assembly	21.7
Control – Heater	21.31	Diplexer	6.43	Fan Assembly	25.31
Control – Throttle	76.1	Diplexer	97.1	Fan Assembly	92.45
Control – Cargo Hook	25.40	Dipstick	79.5	Fanwheel Assembly	65.1
Control – Cargo Hook	25.35	Directional Gyro	95.36	Filler-Vent Plug	65.9
Control – Power Turbine Governor	76.5	Display – PFD & MFD	90.51	Filter – Radio	6.29
Control Assembly – Cabin Air	21.1	Display – PFD & MFD	95.5	Filter – Radio	6.31
Control Assembly – Searchlight . .	90.39	Display – PFD & MFD	95.7	Filter – Radio	90.4
Control Panel	22.1	Display – PFD & MFD	95.9	Filter – Inducer Bleed System	75.1
Controller Assembly	90.23	Distribution Amp	95.57	Filter – AC	21.8
Converter – Power	28.35	Door – Engine Cowling	53.1	Filter – Hydraulic Reservoir	29.3
Converter – Power	90.55	Door – Aft Fuselage	6.5	Filter Assembly – Inlet Barrier Filter	71.11
Converter	90.41	Door – Vent	52.2	Filter Assembly – Inlet Barrier Filter	71.15
Converter	92.75	Door – Vent	52.7	Filter Element – MRGB Oil System . .	63.13
Cord	32.11	Door Assembly – Baggage	52.13	Fire Extinguisher	25.21
Cotter Pin – Cargo Hook	25.27	Door Assembly – Cabin	52.7	Flight Control Computer	22.7
Cotter Pin – Ground Handling Wheel	9.2	Door Assembly – Cabin	52.1	Flir Electronics Control Unit	90.23
Cotter Pin – Ground Handling Wheel	9.6	Drain – AC Evaporator	21.13	Float Tube Assembly – Six Chamber	32.17
Cotter Pin – Main Rotor Hub	62.3	Drain Assembly – Fuel Tank	28.7	FM Transceiver	92.49
Counter Weight – Swashplate	67.41	Drain Plug Assembly – Float		Foam Tape	6.13
Counter Weight – Swashplate	67.42	Landing Gear	32.11	Frame Weldment	53.7
Cover – Antenna Pad	53.17	Drain Valve – Main Fuel Tank	28.5	Frame Weldment	53.11
Cover – Antenna Pad	53.21	Drain Valve – Aux Fuel Tank	28.16	Frame Weldment	53.13
Cover – Battery Compartment	71.23	Drain Valve – Aux Fuel Tank	28.24	Fuel Bladder – Main	28.1
Cover – Bose Headset Jacks	97.59	Drain Weldment – Aux Fuel Tank . .	28.13	Fuel Bladder – Large Auxiliary	28.15
Cover – Bose Headset Jacks	97.61	Droop Stop	62.3	Fuel Bladder – Small Auxiliary	28.23
Cover – Camera Mount	90.17	Dual Audio Control	90.13	Fuel Check Valve	71.27
Cover – Chin	6.9	Dual Audio Control	97.51	Fuel Flow Meter	71.27
Cover – Five-point Harness	25.11	Dual Tachometer	95.1	Fuel Quantity Gage	95.39
Cover – Pedals	67.31	Dual Tachometer	95.28	Fuel Quantity Sender	28.1
Cover – Pop-out Float	32.11	Duct Assembly – AC	21.21	Fuel Sample Tube Installation Kit . . .	6.5
Cover – Seat Belt	25.5	Duct Assembly – AC	21.25	Fuel Sender	28.1
Cover – TRGB Flex Plate	53.17	DVR	90.41	Fuel Sender – Auxiliary Fuel Tank . .	28.16
Cover – TRGB Flex Plate	53.21	DVR/Monitor	92.73	Fuel Sender – Auxiliary Fuel Tank . .	28.24
Cover – Optional Instrument	95.36	Elastic Cord Assembly	67.35	Fuel Sender – Low Fuel	28.7
Cover Assembly – Cyclic	67.1	ELT Transmitter	25.23	Fuel Tank – Large Auxiliary	28.15
Cover Assembly – Spotlight	33.13	EMI Filter Assembly	21.8	Fuel Tank – Small Auxiliary	28.23
Cowling	6.5	Empennage Assembly	53.25	Fuse Holder	25.32
Cowling	53.5	Empennage Ballast Installation Kit . .	8.1	Fuse Holder	96.9
Cradle – Thermal Expansion Valve . .	21.11	Enclosure Assy. – Radar Altimeter . .	97.15	Fuseblock – Battery Relay	96.5

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Fuseblock – EMU	96.21	Guard – Fuel Tank	28.2	Jar Assembly	28.19
Fuseblock – Hourmeters	96.21	Guard – Hydraulic Switch	22.2	Journal-Bearing	62.3
Gage – Outside Air Temperature	95.2	Guard – Hydraulic Switch	67.11	Journal-Bearing	62.3
Gage – Outside Air Temperature	95.31	Guard – Rotor Brake	63.9	Key – Blank	52.1
Gage – Outside Air Temperature	96.23	Hall Effect Sensor	63.3	Key – Duplicate	52.1
Gage – Inlet Barrier Filter	71.12	Hanger	65.3	Key – Duplicate	52.13
Gas Spring	52.5	Hanger	65.5	Key – Duplicate	95.3
Gas Spring	52.11	Hardpoint Hinge Assembly	10.5	Key – Duplicate	95.29
Gas Spring	90.44	Harness Assembly – Air Filter		Key – Duplicate	95.39
Gas Spring	90.45B	Switch	71.9	Keyboard Assembly	90.69
Gasket – Aux Fuel Quantity Sender	28.16	Harness Assembly – Air Filter		Keyboard Assembly	90.71C
Gasket – Aux Strobe	90.77	Switch	71.11	Keyboard Assembly	90.75
Gasket – Avionics Panel Switches	97.25	Harness Assembly – Aux Electrical	90.57	Lamp – HID	33.7
Gasket – Fuel Quantity Sender	28.1	Harness Assembly – Aux Fuel Tank	28.14	Lamp – Searchlight	90.34
Gasket – Navigation Lights	33.3	Harness Assembly – Aux Fuel Tank	28.24	Landing Gear Assembly – Extended	
Gasket – Navigation Lights	33.4	Harness Assembly – COM switch	97.54	Gear	32.1
Gasket – Strobe	33.1	Harness Assembly – Console	95.27	Landing Gear Assembly – Pop-Out	
Gasket – TRGB Chip Detector	65.10	Harness Assembly – E.N.G.	92.79	Floats	32.11
Gasket – TRGB Filler/Vent Plug	65.10	Harness Assembly – Engine	71.3	Landing Gear Assembly	32.1
Gasket – TRGB Sight Gage	65.10	Harness Assembly – External Load	25.27	Laptop Assembly	92.31
Gearmotor – Search Light	90.33	Harness Assembly – Fuel Sender	28.1	LED	21.21
Generator Control Unit	71.23	Harness Assembly – Fuel Sender/		LED	25.23
Gimbal – FLIR Camera	90.19	Fuel Pump	28.16	LED	33.13
Gimbal Assembly – Search Light	90.33	Harness Assembly – TRGB Chip		LED Assembly	33.9
GPS Antenna	92.39	Detector	65.9	LED Strip	25.35
GPS Transceiver	95.9	Headliner	25.17	License Holder	25.19
GPS Transceiver	97.39	HID Landing Lights	33.7	Light Assembly – Police	90.1
GPS Transceiver	97.39	Holder	29.3	Lights – HID Landing	33.7
GPS Transceiver	97.39	Holder	33.15	Load Meter	25.35
Grip – Collective	25.44	Holder	63.4	Lock Set	52.1
Grip – Collective	67.21	Holder	92.53	Lock Set	52.13
Grip – Cyclic	25.43	Horizontal Stabilizer	53.25	Lojack Antenna	90.67
Grip – Cyclic	67.11	Horn	95.40	Lojack Display	90.63
Grip – Cyclic	67.12	Horn Assembly	95.13	Lojack Receiver	90.65
Grip – Cyclic	67.15	Horn Assembly	95.29	Louver and Bezel Assembly	21.21
Grip – Cyclic	67.16	Hose Assembly – Pump Line	28.29	Low Fuel Light	96.39
Grip – Ground Handling Wheel	9.1	Hose Assembly – Vent/Return	28.29	Low Fuel Switch Assembly	96.39
Grip – Ground Handling Wheel	9.3B	Hourmeter – Collective Activated	96.23	Low Fuel Time Delay Assembly	96.39
Grip – Ground Handling Wheel	9.5	Hourmeter – Engine	96.23	Low RPM Light	96.39
Grip – Ground Handling Wheel	9.7B	Hub	64.1	Low RPM Warning Unit	95.33
Grip Assembly – Co-Pilot	67.16	Hub Assembly	62.3	Low RPM Warning Unit	95.40
Grip Assembly – Co-Pilot	67.12	Hub Assembly	64.1	Low RPM Warning Unit	95.14
Grip Assembly – Cyclic	22.2	Hydraulic System Reservoir Assy	29.3	Low Voltage Sensor Module	96.39
Grip Assembly – Cyclic	25.39	Ignition Exciter Box	71.5	Lube – O-ring	8.1
Grip Assembly – Cyclic	25.43	Inertial Monitoring Unit Sensor	90.73	Lube – Petrolatum	12.1
Grip Assembly – Cyclic	67.1	Indicator – Rotor Brake	95.28	Lubricant	63.1
Grip Assembly – Cyclic	67.11	Indicator – Rotor Brake	95.39	Lubricant	79.7
Grip Assembly – Cyclic	67.12	Indicator	95.2	Lug	71.1
Grip Weldment	67.11	Indicator Assembly	97.15	Magnet	63.4
Ground Handling Wheel Assembly	9.1	Indicator Assembly	97.17	Magnetometer	97.13
Ground Handling Wheel Assembly	9.3B	Inner Wire – Fuel Cutoff	76.2	Main Rotor Blade and Spindle	
Ground Handling Wheel Assembly	9.5	Instrument Cluster	95.1	Assembly – Extended Tab	62.1
Ground Handling Wheel Assembly	9.7B	Instrument Cluster	95.31	Main Rotor Blade Tie-Down	10.1
Guard – Aux Fuel Tank	28.16	Instrument Cluster	95.39	Main Rotor Blade Tie-Down	10.1
Guard – Battery Cover	96.1	Insulation – Cabin	25.17	Main Rotor Blade Tie-Down	
Guard – Battery Cover	96.3	Interrupter	67.42	Installation Tool	10.1
Guard – Battery Minder	96.32	Interrupter	18.3	Main Rotor Gearbox Assembly	63.3
		Jackshaft Weldment Assembly	67.25	Main Rotor Gearbox Sub-Assembly	63.7

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Maintenance Record – Binder	99.3	Potentiometer	95.31	Relay Assembly – AC	21.27
Maintenance Record – Component Cards	99.3	Power Cord – HID Lights	33.7	Relay Assembly – Aux Fuel	28.35
Maintenance Record – Insert	99.3	Primary Ring – Cargo Hook	25.27	Relay Assembly – External Power	96.13
Maintenance Record – Tabs	99.3	Probe Assembly – OAT	95.2	Relay Assembly – Warning Lights	96.35
Mapping Computer	90.70	Probe Assembly – OAT	96.23	Reservoir Assembly	29.3
Mast Assembly	63.7	Pulley – AC Compressor	21.4	Restraint	52.17
Mast Fairing Assembly	53.3	Pulley – Rotor Brake	63.9	Restraint	67.35
Meter – Fuel Flow	71.27	Pulley – Rotor Brake	63.10	Rotor Brake Assembly	63.3
MGT Meter	25.35	Pulley – Rotor Brake w/AC	21.25	Router	92.67
Mirror	25.31	Pump Assembly – Hydraulic	63.3	Scale	18.3
Monitor	90.43	Pump Assembly – Hydraulic	29.1	Scanner	92.51
Monitor	90.45B	Pump Assembly – Aux Fuel Tank	28.15	Scissor	29.7
MT106-2 Fuel Dipstick and Holder Installation Kit	6.5	Pump Assembly – Oil	63.4	Scissor	29.9
Muffler Assembly	21.35	Push-Pull Tube Assembly	67.5	Scoop	6.7
N1 Meter	95.39	Push-Pull Tube Assembly	67.9	Scoop Assembly	6.7
Name Plate	95.51	Push-Pull Tube Assembly	67.27	Scroll Assembly	79.1
NAV Antenna	6.39	Push-Pull Tube Assembly	67.33	Scuff Plate Assembly	25.15
Oil – PAG	12.1	Push-Pull Tube Assembly	67.35	Scupper	28.16
Oil – PAG	21.11	Push-Pull Tube Assembly	67.37	Searchlight Control	90.44
Oil – Type “A” ATF	12.1	Push-Pull Tube Assembly	67.39	Seat Assembly	25.1
Oil	62.1	Putty	71.19	Seat Back Assembly	25.1
Oil	79.5	R66 Baggage Door Seals Kit	52.14	Sender	63.3
Oil Cooler	63.15	R66 Cargo Hook Installation	25.25	Sensor – Magnetic pickup	18.1
Oil Cooler Assembly	79.7	R66 IPC – Binder	99.3	Sensor – Vibration Transducer	18.1
Oil Filter	63.13	R66 IPC – Insert	99.3	Servo Assembly	22.1
Oil Filter Head Assembly	63.13	R66 IPC – Tabs	99.3	Servo Assembly	22.5
Oil Lines	79.9	R66 Interior Furnishings Field Kit	99.1	Servo Assembly	29.7
Oil Plug/Chip Detector	71.5	R66 Maintenance Manual – Binder	99.3	Servo Assembly	29.11
Oil Pressure Gage	95.39	R66 Maintenance Manual – Insert	99.3	Servo Assembly	67.25
Oil Pressure Switch	63.3	R66 Maintenance Manual – Tabs	99.3	Set Screw	92.21
Oil Pressure Switch	71.5	R66 Minimum Spare Parts Kit	99.1	Shackle Assembly	32.1
Oil Tank Assembly	79.5	R66 POH – Binder	99.3	Shaft – Main Rotor Drive	63.3
Oil Temp Sender	79.5	R66 POH – Insert	99.3	Shaft Assembly – Ground Handling Wheel	9.1
Oil Temperature Gage	95.39	R66 POH – Tabs	99.3	Shaft Assembly – Ground Handling Wheel	9.3B
PA/Siren Control	90.31	Radar Altimeter	97.19	Shaft Assembly – Input Shaft	63.1
Panel – Annunciator	95.1	Rain Cap	32.2	Shaft Assembly – Tail Rotor	65.3
Pedal – Pilot Side	67.29	Rain Cap	32.11	Shell Assembly – Console	95.13
Pedal Assembly – Co-Pilot	67.29	Rain Gutter	52.17	Shell Assembly – Console	95.14
Pedal Assembly	67.29	Rate-of-Climb Indicator	95.28	Shell Assembly – Console	95.27
Pedal Assembly	67.29	Rate-of-Climb Indicator	95.35	Shell Assembly – Console	95.35
Pin – Locking	67.29	Receiver – ADS-B	97.29	Shell Assembly – Pilot’s Side Console	90.53B
Pin – Locking	67.29	Rectifier	96.5	Shell Assembly – Pilot’s Side Console	90.53C
Pinion Gear	63.5	Reflective Tape	18.3	Shell Assembly – Pilot’s Side Console	97.33
Pitch Control Assembly	65.9	Regulator – Voltage	95.14	Shell Assembly – Pilot’s Side Console	97.37
Pitch Link Assembly	67.42	Regulator – Voltage	95.40	Shell Assembly – Pilot’s Side Console	97.39
Pitot Tube	95.47	Relay – AC	21.27	Shell Assembly – Pilot’s Side Console	97.41
Plug Assembly – External Power	96.14	Relay – Aux Electrical System	90.59	Shell Assembly – Pilot’s Side Console	97.45
Plunger	92.21	Relay – Aux Electrical System	92.75	Shrink Boot	71.3
Pocket	25.19	Relay – Avionics Master	96.43	Shunt	96.17
Pocket	25.19	Relay – Battery	96.6		
Pocket Assembly	96.28	Relay – External Power	96.18		
Pod Antenna	92.39	Relay – Latch	96.43		
Position Lights	33.4	Relay – Starter/Generator	96.18		
Post Assembly – Battery Minder	96.32	Relay – Starter/Generator	96.31		
Post Light	95.35	Relay – Tachometer	96.43		
		Relay – Landing Light	96.43		
		Relay – Tachometer Backup	96.43		

<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>	<i>Alphabetical Index</i>	<i>Page</i>
Sight Gage – Engine Oil Tank	79.5	Stop – Main Rotor	62.3	Switch Assembly – Differential Pressure	71.5
Sight Gage – Hydraulic Reservoir . .	29.3	Strain Relief	95.36	Switch Assembly – Forward Talent Light	92.54
Sight Gage – MRGB	63.4	Strainer – Aux Fuel	28.15	Switch Assembly – Freeze	21.15
Sight Gage – TRGB	65.9	Strainer – Fuel	28.5	Switch Assembly – High-pressure Cutout	21.3
Skid Extension	32.2	Strainer – MRGB Oil	63.4	Switch Assembly – HYD OFF	22.2
Skid Extension	32.11	Strip – Safety Walk	32.2	Switch Assembly – HYD OFF	67.11
Skid Mirror Installation	25.31	Strobe Light – Blue LED	33.1	Switch Assembly – Landing Light . .	67.1
Skid Shoe	32.2	Strobe Light – Red LED	33.1	Switch Assembly – Load Cell Meter	25.36
Skid Shoe	32.11	Strobe Light – White LED	33.1	Switch Assembly – Low Fuel	28.7
Skid Shoe	32.12	Strobe Light Assembly – Blue LED . .	90.77	Switch Assembly – Low-pressure Cutout	21.3
Skid Step	32.19	Strobe Light Assembly – Red LED . .	90.77	Switch Assembly – News Equipment Master	92.17
Skid Tube	32.11	Strobe Light Assembly – White LED	90.77	Switch Assembly – Oil Pressure . . .	71.5
Skid Tube Assembly	32.2	Strut	53.13	Switch Assembly – TV Tuner Audio	92.58
Slass ECU	90.37	Strut	71.19	Tachometer – Optical Photocell . . .	18.1
Snubber Assembly	21.3	Strut Assembly – Aft	10.7	Tail Light Assembly – LED	33.3
Solenoid Assembly	29.3	Strut Assembly – Aft	32.1	Tail Rotor Assembly	64.1
Solid State Drive	92.73	Strut Assembly – Aft	32.11	Tail Rotor Drive Shaft Weldment – Fan	65.1
Speaker	90.29	Strut Assembly – Extended Gear . .	32.2	Tail Rotor Gearbox Assembly	65.9
Spidertracks Receiver	97.69	Strut Assembly – Forward	10.7	Tail Rotor Gearbox – Pinion	65.10
Spindle Assembly	62.1	Strut Assembly – Forward	32.1	Tail Rotor Gearbox – Gear	65.10
Splitter Assembly	92.58	Strut Assembly – Forward	32.11	Tail Rotor Guard	53.26
Spotlight	21.22	Strut Assembly	53.13	Tail Skid	53.26
Spotlight	33.13	Sun Shield – Tachometer	18.3	Tailcone Assembly	53.21
Spring – Aft Access Panel	6.7	Support Assembly – Aux Fuel Tank	28.13	Tailcone Assembly – E.N.G	53.17
Spring – Baggage Door	52.14	Support Assembly – Aux Fuel Tank	28.21	Tailcone Assembly – Five Antenna	53.17
Spring – Cyclic	67.1	Support Assembly – Monitor	90.48	Tailcone Assembly – Three Antenna	53.17
Spring – Cyclic	67.11	Suppression Diode Assembly	96.6	Tailcone Assembly – Three Antenna and Nav Antenna	53.17
Spring – Cyclic	67.15	Suppression Diode Assembly	96.13	Tank Assembly	28.15
Spring – Collective	67.23	Suppression Diode Assembly	96.19	Tec Aces Analyzer and Turbo Prob- balancing System	18.1
Spring – Engine Air Induction	71.9	Suppression Diode Assembly	96.31	Telatemp – Hydraulic Pump	29.1
Spring – Fuel Control Unit	76.2	S-VIDEO Cable	90.45B	Telatemp – Hydraulic Pump	63.3
Spring – Inlet Barrier Filter	71.12	Swashplate Assembly	67.42	Teletemp – TRGB	65.10
Spring – Monitor	90.47	Switch – Battery	97.25	Temperature Probe	97.9
Spring – Rotor Brake	63.9	Switch – Calibrate	90.39	Tester Assembly – Warning Lights	97.63
Spring – Rotor Brake	63.10	Switch – Engine Compartment Fire	96.41	Thermal Expansion Valve (TXV) . .	21.11
Spring Assembly – Baggage Door . .	52.13	Switch – Focus	90.39	Thermostat	79.7
Spring Pin – Bellcrank Assembly . .	67.37	Switch – Foot	90.27	Thermostat Assembly	63.13
Spring Pin – Cabin Heat Valve	21.35	Switch – FREQ and CH SEL	67.15	Thrust Washer	62.3
Spring Pin – Collective	67.21	Switch – Hourmeter	96.23	Time Delay – Fuel Filter	95.3
Spring Pin – Collective Friction Knob	67.1	Switch – HYD OFF	67.15	Time Delay – Low Fuel	95.3
Spring Pin – Door Bumper	52.5	Switch – Ignition	95.28	Tip Cover	62.1
Spring Pin – Governor Control	76.5	Switch – Joystick	90.39	Tire	9.1
Spring Pin – Ground Handling Wheel	9.5	Switch – Low RPM Warning	96.23	Tire	9.3B
Spring Pin – Ground Handling Wheel	9.7B	Switch – Light	90.1	Tire	9.6
Stabilizer – Horizontal	53.25	Switch – MRGB Oil Pressure	63.5	Tire	9.7C
Stabilizer – Horizontal	53.29	Switch – MRGB Temperature	63.5	Tone Generator (ATG-410)	97.19
Stabilizer – Lower Vertical	53.26	Switch – On-Off / Start	90.39	Torque Meter	25.35
Stabilizer – Upper Vertical	53.25	Switch – Remote Control	25.23	Torque Meter	95.35
Stabilizer Assembly – Pop-out Floats	53.29	Switch – Rotor Brake Light	63.3	Torx Bit	28.19
Stick Assembly – Collective	25.44	Switch – Slave	90.39	Transceiver – Technisonic	90.7
Stick Assembly – Collective	67.21	Switch – Test	95.35		
Stick Assembly – Collective	67.22	Switch – Trim	22.2		
Stop – Collective	67.22	Switch – Video	92.69		
Stop – Door Vent	52.2	Switch Assembly – Anti-ice	96.37		
		Switch Assembly – Audio Panel			
		Transmit Key	67.12		
		Switch Assembly – Auto Pilot Off . .	22.2		

<u>Alphabetical Index</u>	<u>Page</u>	<u>Alphabetical Index</u>	<u>Page</u>	<u>Alphabetical Index</u>	<u>Page</u>
Transceiver (FM)	90.3	Window	33.10		
Transceiver (FM)	90.5B	Window	52.17		
Transceiver (GPS)	97.33	Windshield	52.17		
Transceiver (GPS)	97.37	Wingbolt Assembly	90.34		
Transceiver (GPS/COM)	97.37	Wire Harness Assembly – Engine . .	71.5		
Transceiver (GPS/COM/NAV)	97.37	Wire Harness Assembly – Tail Light	53.25		
Transceiver (GPS/NAV/COM)	90.39B	XM Radio Receiver	97.23		
Transceiver (GPS/NAV/COM)	90.53B	Yaw String	52.18		
Transceiver (GPS/NAV/COM)	97.33	Yoke – Engine Shaft	63.1		
Transceiver	90.53C	Yoke – Main Rotor Gear Box	63.5		
Transceiver	97.1	Yoke – Tail Rotor Gear Box	65.13		
Transceiver (UHF)	92.1	Yoke – Tail Rotor Drive Shaft	65.3		
Transceiver (VHF COM)	97.25	Yoke Assembly – Swashplate	67.41		
Transceiver Assembly (VHF)	92.1	Yoke Assembly – MRGB Output . . .	63.4		
Transducer – Fuel Flow	71.27	Yoke Assembly – Cyclic Torque			
Transmit Switch Assembly	92.13	Tube	67.5		
Transmitter	92.37				
Transponder	97.21				
Transponder (Mode C)	97.25				
Transponder (Mode C)	97.31				
Transponder (Mode C)	97.63				
Transponder (Mode S)	97.25				
Transponder (Mode S)	97.31				
Transponder (Mode S)	97.63				
Tray – 9-volt Battery	96.11				
Tray – Keyboard	90.71C				
Tray – Mapping Computer	90.71B				
Trigger Switch	67.11				
Trigger Switch	67.15				
Trim String	52.18				
Tube – Inner	9.1				
Tube – Inner	9.3B				
Tube – Inner	9.6				
Tube – Inner	9.7C				
Tube – Tail Rotor Guard Mount	53.26				
Turbine Oil – HTS	12.1				
Turn Coordinator	95.36				
TV Receiver	92.59				
Upper Console Assembly	97.69				
USB Port	92.45				
USB Port	96.27				
USB Port	96.28				
Valve – Cabin Heat	21.36				
Valve – Drain	28.5				
Valve – Fuel Shutoff	28.10				
Valve – Pressure Topping and Relief	32.17				
Valve Assembly – Cabin Heat	21.36				
V-Belt	21.4				
Vent Assembly	29.3				
Vent Weldment	28.1				
Video Router	92.69				
Voltage Regulator	95.33				
VOR Indicator	97.67				
Wall – Cargo Hold	90.61				
Warning Light Test Board	97.63				
Weight – Ballast	8.1				
Window	33.9				