

ROBINSON HELICOPTER COMPANY

R66 ILLUSTRATED PARTS CATALOG

RTR 660 VOLUME II

Production Certificate Number 424WE

Type Certificate Number R00015LA



Robinson Helicopter Company
2901 Airport Drive
Torrance, California 90505-6115
United States of America

Phone: (310) 539-0508
Fax: (310) 539-5198
Web: www.robinsonheli.com

OFFICE HOURS

Monday through Friday, 7:30 a.m. to 4:30 p.m., Pacific Time.
Lunch hour is 11:30 a.m. to 12:30 p.m.

HOLIDAYS

Please visit www.robinsonheli.com for a complete list of holidays and company shutdowns.

CUSTOMER SUPPORT

Please visit www.robinsonheli.com for a complete support directory. Procure parts from any R66 Dealer or Service Center, or order directly from RHC Customer Support via email, fax, or phone.

PUBLICATIONS

Viewing RHC Maintenance Manuals (MMs) and Illustrated Parts Catalogs (IPCs) online at www.robinsonheli.com is recommended to ensure use of current data. Viewing MMs and IPCs offline via paper or digital download requires verification that the data is current. Refer to the online MM or IPC Revision Log for the list of current pages.

SUBSCRIPTION ORDER AND RENEWAL FORMS

Subscription order and renewal forms are located at www.robinsonheli.com.

WARRANTY INFORMATION

Helicopter and parts warranty information is located at www.robinsonheli.com.

CHAPTER LIST

	Introduction
Chapter 6	Dimensions and Descriptions
Chapter 8	Weight and Balance
Chapter 9	Ground Handling
Chapter 10	Parking and Storage
Chapter 11	Placards and Markings
Chapter 12	Servicing
Chapter 18	Track and Balance
Chapter 21	Environment Control
Chapter 22	Autopilot
Chapter 25	Furnishings
Chapter 28	Fuel System
Chapter 29	Hydraulics
Chapter 32	Landing Gear
Chapter 33	Lights
Chapter 52	Doors and Windows
Chapter 53	Fuselage
Chapter 62	Main Rotor
Chapter 63	Main Rotor Drive System
Chapter 64	Tail Rotor Assembly
Chapter 65	Tail Rotor Drive System
Chapter 67	Flight Controls
Chapter 71	Powerplant
Chapter 75	Engine Air Systems
Chapter 76	Engine Controls
Chapter 79	Engine Oil System
Chapter 90	Police Version
Chapter 92	E.N.G. Version
Chapter 95	Instrument System
Chapter 96	Electrical System
Chapter 97	Avionics
Chapter 99	Special Tools
Chapter 100	Revision Log
Appendix A	Alphabetical Index
Appendix B	Numerical Index

TECHNICAL PUBLICATIONS

Please direct recommended changes to RHC Technical Publications via the email address listed below, by phone, or by submitting a duplicate of this completed form by fax or mail. Please include or have available the information detailed by this form.

Recommended changes may include but are not limited to: general comments, corrections, omitted information, or clarification of instructions.

Please send recommendations to:

Email: techpubs@robinsonheli.com

Phone: (310) 539-0508

Fax: (310) 539-5198

Robinson Helicopter Company
Attention: Technical Publications
2901 Airport Drive
Torrance, CA 90505-6115
U.S.A.

Date: _____

Publication:

Name: _____

Chapter:

Company:

Section:

Helicopter Model:

Page:

Serial Number:

Revision:

Phone:

Email:

COMMENTS:

[illegible]

CATALOG FEATURES

INTRODUCTION

The Illustrated Parts Catalog (IPC) is used in conjunction with the R66 Maintenance Manual (MM) to provide instructions for continued airworthiness. The IPC identifies parts, components, and detail parts that make up, and are required to support, the R66 helicopter. RHC uses a modified Air Transport Association (ATA) chapter structure to organize the various systems of the R66 Helicopter.

The catalog features:

1. A chapter list
2. A table of contents located in the front of the catalog
3. A table of contents at the front of each chapter
4. Alphabetical and numerical indexes located in the appendices at the back of the catalog

PART DESIGNATION

Robinson parts are designated with a part number prefix "A", "B", "C", etc., followed by three digits and a dash number, such as A101-1. Robinson special tools are designated with a part number prefix "MT". For standard hardware items such as bolts, nuts, screws, etc., "AN", "MS", and "NAS" part numbers are used. When a rivet length is not specified, length must be determined by the installer. In some instances, vendor part numbers are also used.

PARTS AVAILABILITY

"X" indicates part is available as a separate spares item.

"O" indicates part is no longer available, or only available as part of a higher assembly.

CHANGE BARS

Change bars are located on the outside edge of the page, and indicate new or revised data. Change bars between lines indicate data was removed, and parts renumbered as required. Change bars on figure pages indicate changes to the figure somewhere across the page in the area of the change bar. A change bar encompassing the figure title and item 1 indicates the figure number changed. Change bars that are the full length of the page indicate all new data, usually a new figure and parts data.

ABBREVIATIONS

Assy – assembly	max – maximum	rev. – Revision
A/R – as required	min – minimum	RH – right hand
A.O.G. – Aircraft On Ground	MM – Maintenance Manual	RHC – Robinson Helicopter Company
Cont'd – continued	MR – main rotor	§ – Section
Incl – includes	OH/EXCH – Overhaul/Exchange	TR – Tail Rotor
LH – left hand	Ref – Part(s) "referenced" for clarity	TRDS – Tail Rotor Drive Shaft

ORDERING AND SHIPPING

All orders must include instructions for shipping. All parts or components shipped to RHC must include a signed Component Return/Authorization Form. Return shipments must be paid for by the dealer or distributor. NOTE: Handling fees will be applied to all orders received which are under \$1,000.00. Orders shipped on an A.O.G. basis (24 hours domestic, 48 hours foreign) will be assessed additional charges.

WARRANTY

RHC will apply the same 1-year or 1000-hour RHC limited warranty to all parts and components purchased from RHC.

RETURNS

No unused parts may be returned to RHC for credit if the parts show any indication whatsoever of use or damage, or if the cost of the individual part was less than \$25 (U.S.). Parts returned within 30 days of purchase will be assessed a 20% restocking fee. No parts may be returned after 30 days without prior RHC approval. Any parts approved for return after 30 days will be assessed a 50% restocking fee.

Continued

CATALOG FEATURES (Cont'd)**REVISIONS**

Before using this catalog, be sure it is current. A list of all pages is located in Chapter 100, Revision Log, at the back of this catalog. If a new parts catalog is purchased, be sure to complete and mail the Subscription Order and Renewal Form found on page ii of this catalog; this will ensure receipt of revisions for a two-year period. Revision status of Robinson Technical Publications is at www.robinsonheli.com.

RHC reserves the right to cancel, add, or change the parts and assemblies described in this catalog without notice.

HOW TO USE THE ILLUSTRATED PARTS CATALOG

Below are search protocols, based on the information known:

If searching by part number:

1. Digital Catalog:

The IPC is available online in digital PDF format.

- a. Open the chapter PDF or the full book PDF in the PDF reader of your choice.
- b. In your PDF reader open a "search" or "find" window and type in the p/n you are looking for.
- c. All instances of that p/n should be found, and you can move through the list until you find the information you are looking for.

2. Paper Catalog:

- a. Go to Appendix B, the Numerical Index, and locate the part number.
- b. You will find where that part number is called out in the Illustrated parts Catalog (IPC).
The Numerical Index is divided into six sections, RHC part numbers, RHC "KI" (kit) numbers, RHC "MT" (tool) numbers, RHC "R" numbers (specialty parts), vendor part numbers, and standard hardware part numbers.
Note: Vendor part numbers are sorted by column from left to right numerically then alphabetically, and all hyphens are ignored for sorting purposes. i.e.- "75-900-2026" comes before "760", and "760" comes before "A15A".
- c. Note the page(s) and item number(s) listed.

If searching by part name:

1. Digital Catalog:

The IPC is available online in digital PDF format.

- a. Open the chapter PDF or the full book PDF in the PDF reader of your choice.
- b. In your PDF reader open a "search" or "find" window and type the part name you are looking for.
- c. All instances of that part name should be found, and you can move through the list until you find the information you are looking for.

2. Paper Catalog:

- a. Go to Appendix A, the Alphabetical Index, and look for the name of the part, component, or system you are looking for.
- b. You may find listings under multiple names for some components. Only the most common parts, components, and systems are listed in the Alphabetical Index.
- c. Note the page(s) and item number(s) listed.

If searching by system:

1. Go to the Chapter List on page iii, and determine the appropriate chapter.
2. Go to the Table of Contents, or the Chapter Table of Contents, and further determine from the Figure titles the illustration where the part might logically appear.
3. Go to the Figure number and locate the part and its item number on the illustration.
4. Go to the item number noted in the parts list and verify it is the part you are looking for by reading the description. Be aware of any asterisks and the notes they reference, to verify the part is the current part for your aircraft. Find the part number in the illustration for location and associated hardware and/or components.

Intentionally Blank

PART INTERCHANGEABILITY

The following parts are interchangeable. Unless noted otherwise, whenever one part is referred to in this catalog, its substitute part is also permitted.

<u>PART:</u>	<u>INTERCHANGEABLE WITH:</u>
110-__ Telatemp	F110-__ Telatemp
22K1-048 Cap nut	B340-10 Cap nut
22K1-82 Cap nut	B340-4 Cap nut
354601 Fuse block	D262-1 Fuse block
354602 Fuse block	D262-2 Fuse block
4509 & Q4509 Lamp	B196-26 Lamp
4591 Lamp	B196-27 Lamp
511TS1-3 Switch	B300-4 Switch
94830A030 Nut	21FKF-518 Nut
AN_ and MS_ part	AS_ part or A880 part numbers.
AN340 Nut	MS35649 Nut per NASM35649 except AN340B8 Nut
AN340B8 Nut	B301-8 Nut
AN345 Nut	MS35650 Nut per NASM35650
AN364 Nut	MS21083 Nut per NASM21083
AN507 Screw	MS24693 Screw per NASM24693
AN509 Screw	MS24694 Screw per NASM24694
AN515 Screw	MS35206 Screw per NASM35206
AN515C Screw	MS51957 Screw
AN515UB6R6 Screw	B567-25 Screw
AN515UB6R10 Screw	B567-28 Screw
AN515UB8R10 Screw	B567-43 Screw
AN515UB8R12 Screw	B567-44 Screw
AN515UB8R20 Screw	MS35214-47 Screw per NASM35214
AN525 & AN526 Screw	MS27039C Screw per NASM27039, or B526-6 or -8 Screw and B527-08 Washer per R44 SL-51A. Except where noted.
AN814 & MS24391 Plug	AS5169 Plug
AN815 & MS24392 Union	AS5174 Union
AN818-__ D Nut	AN818-__ W Nut
AN819 & MS20819 Sleeve	AS5176 Sleeve
AN822 & MS20822 Elbow	AS5195 Elbow
AN823 & MS20823 Elbow	AS5196 Elbow
AN825 & MS20825 Tee	AS5197 Tee
AN826 & MS20826 Tee	AS5198 Tee
AN894 & MS24398 Bushing	AS5173 Bushing
AN900 Gasket	MS35769 Gasket per AS35769
AN924 & MS24400 Nut	AS5178 Nut
AN931 Grommet	MS35489 Grommet
AN935 Lockwasher	B332-__ Lockwasher, dash number per MS35338
AN936 Lockwasher	MS35335 Lockwasher
AN960-4L Washer	NAS1149FN416P Washer
AN960-4 Washer	NAS1149FN432P Washer
AN960-6L Washer	NAS1149FN616P Washer
AN960-6 Washer	NAS1149FN632P Washer
AN960-8L Washer	NAS1149FN816P Washer
AN960-8 Washer	NAS1149FN832P Washer
AN960-10L Washer	NAS1149F0332P Washer
AN960-10 Washer	NAS1149F0363P Washer

PART INTERCHANGEABILITY (Cont'd)

<u>PART:</u>	<u>INTERCHANGEABLE WITH:</u>
AN960-416L Washer	NAS1149F0432P Washer
AN960-416 Washer	NAS1149F0463P Washer
AN960-516L Washer	NAS1149F0532P Washer
AN960-516 Washer	NAS1149F0563P Washer
AN960-616L Washer	NAS1149F0632P Washer
AN960-616 Washer	NAS1149F0663P Washer
AN960-816L Washer	NAS1149F0832P Washer
AN960-816 Washer	NAS1149F0863P Washer
AN960-1016L Washer	NAS1149F1032P Washer
AN960-1016 Washer	NAS1149F1063P Washer
AN960PD8L Washer	NAS1149DN816J Washer
AN960PD416L Washer	NAS1149D0416J Washer
AN960PD516L Washer	NAS1149D0516J Washer
AN960PD616L Washer	NAS1149D0616J Washer
AVDEL 016__-__ Rivet	B204-__ Rivet
B270-6 Sealant	A701-11 Tape
CCR244SS-3-02 Rivet	B204-5 Rivet
MS26574-__ Circuit breaker	B297-__ Circuit breaker, except B297-25 and B297-120
MS3320-20 Circuit breaker	B297-120 Circuit breaker
LW-18959-150-25 Clamp	B444-1 Clamp
LW-18959-163-25 Clamp	B444-2 Clamp
LW-18959-175-25 Clamp	B444-3 Clamp
MS20604ML4W1 Rivet	MS20604M4W1 Rivet per NASM20604
MS21042L3 thru L6 Nut	D210-3 thru -6 Nut*
MS21209__ Insert	MS21209__ L or NAS1130__ Insert
MS21919__ Clamp	AS21919__ Clamp
MS24665 CAD plated steel cotter pin	MS24665 CRES cotter pin per NASM24665
MS27039C080__ Screw	B526-6 or -8 Screw and B527-08 Washer per R44 SL-51A. Except where noted.
MS27151-__ Palnut	B330-__ Palnut
NAS1067 Nutplate	MS21086 Nutplate per NASM21086
NAS1068A__ Nutplate	MS21075L__ E Nutplate per NASM21075
NAS1291-04 thru -08 Nut	MS21042 Nut per NASM21042
NAS1291-3 thru -10 Nut	D210-3 thru -10 Nut*
NAS1303 thru NAS1320 Bolt, except 1307 Bolt	NAS6603 thru NAS6620** Bolt, except 6607 Bolt
NAS1919B0__ SO__ Rivet	NAS9301B-__-0__ Rivet
NAS1921B0__ SO__ Rivet	NAS9302B-__-0__ Rivet
NAS428-__-__ Bolt	NAS428-__ A__ Bolt
NAS487 Instrument nut	MS33737 Instrument nut per NASM33737
NAS679A__ Nut	NAS1291-__ Nut
NAS679C__ M Nut	NAS1291C__ M Nut
NAS696 Nutplate	MS21071 Nutplate per NASM21071
NAS697 Nutplate	MS21069 & MS21070 Nutplate per NASM21069 & NASM21070
NAS698 Nutplate	MS21073 Nutplate per NASM21073

* One-way interchangeability, only D210 nut shall be used for listed sizes.

** The following bolts must be NAS1300 series only: NAS1304-17 and NAS1305-35.

Intentionally Blank

CONTENTS

INTRODUCTION

<u>Figure</u>	<u>Title</u>	<u>Page</u>
—	Cover Page	i
—	Subscription Order and Renewal Form	ii
—	Warranty Information	ii
—	Chapter List	iii
—	Recommended Change Report	iv
—	Catalog Features	v
—	Part Interchangeability	viii
—	Contents	xi

CHAPTER 6 – DIMENSIONS AND DESCRIPTIONS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
6-1	Access Panels – Forward Cabin	6.0
6-3	Access Panels – Aft Cabin	6.2
6-5	Access Panels – Aft Fuselage (LH)	6.4
6-7	Access Panels – Aft Fuselage (RH)	6.6
6-9	Access Panels – Chin	6.8
6-11	Access Panels – Belly	6.10
6-13	Access Panels – Belly (Float Ship)	6.12
6-15	ADF/Marker Beacon Antennas	6.14
6-17	UHF and DME Antennas	6.16
6-19	Transponder Antenna Installation	6.18
6-21	Aft Belly Antennas	6.20
6-23	Aft Belly Antennas	6.22
6-25	Kannad ELT Antenna Installation	6.24
6-27	GPS Antenna Installation (Cowl Mount)	6.26
6-29	Tailcone Antenna Connectors	6.28
6-31	Forward Upper Tailcone Antennas	6.30
6-33	Aft Upper Tailcone Antennas	6.32
6-35	Lower Tailcone Antennas	6.34
6-37	NAV Antenna Installation	6.36
6-39	NAV Antenna Combiner / Diplexer Installation	6.38
6-41	Radar Altimeter Antennas	6.40
6-43	Glideslope Antenna Installation	6.42

CHAPTER 8 – WEIGHT AND BALANCE

<u>Figure</u>	<u>Title</u>	<u>Page</u>
8-1	Ballast Installation	8.0

CHAPTER 9 – GROUND HANDLING

<u>Figure</u>	<u>Title</u>	<u>Page</u>
9-1	Ground Handling Wheel (Cup and Cone Bearings)	9.0

CHAPTER 9 – GROUND HANDLING (Cont'd)

<u>Figure</u>	<u>Title</u>	<u>Page</u>
9-3B	Ground Handling Wheel (Sealed Bearings)	9.3A
9-5	Ground Handling Wheel Assembly – Pop-Out Floats (Cup and Cone Bearings)	9.4
9-7B	Ground Handling Wheel Assembly – Pop-Out Floats (Sealed Bearings)	9.7A
9-9	Ground Handling Ball Installation	9.8

CHAPTER 10 – PARKING AND STORAGE

<u>Figure</u>	<u>Title</u>	<u>Page</u>
10-1	Main Rotor Blade Tie-Downs	10.0
10-3	Helicopter Cabin Covers	10.2
10-5	Hardpoint Hinge and Tie-Down Ring Installations	10.4
10-7	Main Rotor Blade Support Installation	10.6
10-9	Cover Assembly – Exhaust	10.8

CHAPTER 11 – PLACARDS AND MARKINGS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
11-1	Placards and Markings	11.0
11-5	Placards and Markings	11.4
11-9	Placards and Markings (Japanese)	11.8

CHAPTER 12 – SERVICING

<u>Figure</u>	<u>Title</u>	<u>Page</u>
—	Lubricants	12.1
—	Adhesives	12.3

CHAPTER 18 – TRACK AND BALANCE

<u>Figure</u>	<u>Title</u>	<u>Page</u>
18-1	TEC ACES Balancing System	18.0
18-3	TEC ACES Balancing System	18.2

CHAPTER 21 – ENVIRONMENT CONTROL

<u>Figure</u>	<u>Title</u>	<u>Page</u>
21-1	Cabin Air Vent – Control Installation	21.0
21-3	Air Conditioning – Compressor Assembly Installation	21.2
21-7	Air Conditioning – Condenser Installation	21.6
21-11	Air Conditioning – Evaporator Assembly Installation	21.10
21-13	Air Conditioning – Evaporator Drain Installation	21.12

CONTENTS

CHAPTER 21 – ENVIRONMENT CONTROL (Cont'd)

<u>Figure</u>	<u>Title</u>	<u>Page</u>
21-15	Air Conditioning – Evaporator Electrical Components	21.14
21-17	Air Conditioning – Hose Assemblies	21.16
21-19	Air Conditioning – Line Assemblies	21.18
21-21	Air Conditioning – Duct Assembly Installation	21.20
21-25	Air Conditioning – Furnishings	21.24
21-27	Air Conditioning – Electrical Components	21.26
21-31	Cabin Heater – Control Installation	21.30
21-33	Cabin Heater – Forward Components Installation	21.32
21-35	Cabin Heater – Muffler & Control Valve Installation	21.34
21-39	Cabin Heater – Aft Components Installation	21.38

CHAPTER 22 – AUTOPILOT

<u>Figure</u>	<u>Title</u>	<u>Page</u>
22-1	(Pitch) Servo Assembly Installation and Components	22.0
22-5	(Roll) Servo Assembly Installation	22.4
22-7	Flight Control Computer Installation	22.6

CHAPTER 25 – FURNISHINGS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
25-1	Seat Installation	25.0
25-3	Forward Seat Belt Installation	25.2
25-5	Aft Seat Belt Installation	25.4
25-9	Five-Point Harness Installation	25.8
25-11	Five-Point Harness Inertia Reel Installation	25.10
25-13	Five-Point Harness Bumper Assembly Installation	25.12
25-15	Carpet Installation	25.14
25-17	Headliner and Insulation Installation	25.16
25-19	Document Holder Installations	25.18
25-21	Fire Extinguisher Installation	25.20
25-23	Kannad ELT Installation	25.22
25-25	Cargo Hook Installation	25.24
25-27	Cargo Hook – Installation	25.26
25-31	Cargo Hook – Details	25.30
25-35	Cargo Hook – Left Side Details	25.34
25-39	Cargo Hook – Right Side Details	25.38
25-43	Cargo Hook – Left Seat Flight Controls	25.42

CHAPTER 28 – FUEL SYSTEM

<u>Figure</u>	<u>Title</u>	<u>Page</u>
28-1	Fuel Bladder Assembly	28.0
28-5	Fuel Bladder Assembly – Aft Components	28.4
28-7	Low Fuel Switch and Drain Assembly Installation	28.6
28-9	Fuel Valve and Hoses Installation	28.8
28-13	Large Auxiliary Fuel Tank Installation	28.12
28-15	Large Auxiliary Fuel Tank Assembly	28.14
28-19	Large Auxiliary Fuel Tank – Components	28.18
28-21	Small Auxiliary Fuel Tank Installation	28.20
28-23	Small Auxiliary Fuel Tank Assembly	28.22
28-27	Small Auxiliary Fuel Tank – Components	28.26
28-29	Auxiliary Fuel Tank – Hose Installation	28.28
28-31	Auxiliary Fuel Tank – Electrical Components	28.30
28-35	Auxiliary Fuel Tank – Electrical Components	28.34

CHAPTER 29 – HYDRAULICS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
29-1	Hydraulic Pump Installation	29.0
29-3	Hydraulic Reservoir Installation	29.2
29-7	Forward Servos Installation	29.6
29-9	Forward Servos Hose Installation	29.8
29-11	Aft Servo Installation	29.10

CHAPTER 32 – LANDING GEAR

<u>Figure</u>	<u>Title</u>	<u>Page</u>
32-1	Landing Gear Assembly	32.0
32-5	Strut Fairing Assembly	32.4
32-7	Pop-Out Floats – Cylinder Assy. Installation	32.6
32-9	Pop-Out Floats – Lever Assembly	32.8
32-11	Pop-Out Floats – Float Assembly Installation	32.10
32-15	Pop-Out Floats – Hose Assembly Installation	32.14
32-17	Pop-Out Floats – Float Assy. and Hose Assy.	32.16
32-19	Skid Step Installation	32.18

CHAPTER 33 – LIGHTS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
33-1	Strobe Light Installation	33.0
33-3	Navigation Lights Installation	33.2
33-7	HID Landing Lights Installation	33.6
33-9	Cabin Interior Lighting Installation	33.8
33-13	Spotlight Installation	33.12
33-15	MRGB LED Light System	33.14

CONTENTS

CHAPTER 52 – DOORS AND WINDOWS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
52-1	Forward Door Assembly	52.0
52-5	Forward Door Installation	52.4
52-7	Aft Door Assembly	52.6
52-11	Aft Door Installation	52.10
52-13	Baggage Door Installation	52.12
52-17	Windshield Installation – Standard (Acrylic)	52.16
52-21	Windshield Installation – Impact-resistant (Polycarbonate)	52.20
52-23	Windshield Installation – Impact-resistant (Polycarbonate)	52.22
52-25	Windshield Installation – Impact-resistant (Polycarbonate) with Wire Strike Provisions	52.24

CHAPTER 53 – FUSELAGE

<u>Figure</u>	<u>Title</u>	<u>Page</u>
53-1	Engine Cowling Installation	53.0
53-3	Mast Fairing Assembly	53.2
53-5	Tailcone Cowling Installation	53.4
53-7	Lower Frame Assemblies	53.6
53-11	Hydraulic Servo Support Frame Assembly . .	53.10
53-13A	Upper Frame Assembly	53.12
53-13B	Upper Frame Assembly	53.15
53-17	Tailcone Assembly	53.16
53-21	Tailcone Assembly	53.20
53-25	Empennage Assembly	53.24
53-29	Stabilizer Installation	53.28
53-31	Wind Deflector Installation	53.30

CHAPTER 62 – MAIN ROTOR

<u>Figure</u>	<u>Title</u>	<u>Page</u>
62-1	Main Rotor Blade Assembly	62.0
62-3	Main Rotor Hub	62.2

CHAPTER 63 – MAIN ROTOR DRIVE SYSTEM

<u>Figure</u>	<u>Title</u>	<u>Page</u>
63-1	Engine Shaft Weldment & Clutch Assembly	63.0
63-3	Main Rotor Gearbox & Mast Assembly	63.2
63-7	Main Rotor Gearbox & Mast Installation . . .	63.6
63-9	Rotor Brake Assembly	63.8
63-13	Main Rotor Gearbox – Oil System	63.12
63-15	Main Rotor Gearbox – Oil Cooler Installation	63.14

CHAPTER 64 – TAIL ROTOR

<u>Figure</u>	<u>Title</u>	<u>Page</u>
64-1	Tail Rotor Assembly	64.0

CHAPTER 65 – TAIL ROTOR DRIVE SYSTEM

<u>Figure</u>	<u>Title</u>	<u>Page</u>
65-1	Tail Rotor Drive Fan Shaft, Fanwheel, & Flex Plate Installation	65.0
65-3	Tail Rotor Drive Shaft Assembly & Flex Plate Installation	65.2
65-5	Hanger Bearing	65.4
65-7	Damper Assembly	65.6
65-9	Tail Rotor Gearbox Installation	65.8
65-13	Tail Rotor Gearbox Seals	65.12

CHAPTER 67 – FLIGHT CONTROLS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
67-1	Cyclic Control System	67.0
67-5	Cyclic Pivot Assembly and Torque Tube . . .	67.4
67-9	Push-Pull Tube Assemblies (Lower)	67.8
67-11	Cyclic Grip Assembly	67.10
67-15	Cyclic Grip Assembly	67.14
67-19	Cyclic Friction Assembly	67.18
67-21	Collective Stick Assembly	67.20
67-25	Jackshaft Weldment Installation	67.24
67-27	Push-Pull Tube Assemblies (Upper)	67.26
67-29	Tail Rotor Controls – Adjustable Pedals . . .	67.28
67-31	Tail Rotor Controls – Pedal Cover Installation	67.30
67-33	F334 Support Assembly Installation	67.32
67-35	C317 Bellcrank Assembly	67.34
67-37	F316 Bellcrank Assembly	67.36
67-39	A331 Bellcrank Assembly	67.38
67-41	Swashplate Assembly	67.40
67-45	Swashplate Ball Installation	67.44

CHAPTER 71 – POWERPLANT

<u>Figure</u>	<u>Title</u>	<u>Page</u>
71-1	Engine Installation	71.0
71-3	Engine Components – Right Side	71.2
71-5	Engine Components – Right Side	71.4
71-7	Engine Components – Left Side	71.6
71-9	Engine Air Induction – Cage and Filter Assemblies	71.8
71-11	Engine Air Induction – Inlet Barrier Filter . .	71.10

CONTENTS

CHAPTER 71 – POWERPLANT (Cont'd)

<u>Figure</u>	<u>Title</u>	<u>Page</u>
71-15	Engine Air Induction – Inlet Barrier Filter (Earlier ships)	71.14
71-17	Bellmouth Installation	71.16
71-19	Exhaust Weldment and Strut Installation	71.18
71-21	Starter-Generator Installation	71.20
71-23	Generator Control Unit Installation	71.22
71-25	Engine Monitoring Unit Installation	71.24
71-27	G090 Fuel Flow Meter Installation	71.26

CHAPTER 75 – ENGINE AIR SYSTEMS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
75-1	Inducer Bleed System – Vent Box Installation	75.0

CHAPTER 76 – ENGINE CONTROLS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
76-1	Fuel Control Unit Controls Installation	76.0
76-5	Power Turbine Governor Control Installation	76.4
76-7	Actuator Assembly Installation	76.6

CHAPTER 79 – ENGINE OIL SYSTEM

<u>Figure</u>	<u>Title</u>	<u>Page</u>
79-1	Cooling Scroll Assembly	79.0
79-3	Cooling Duct Box Assemblies	79.2
79-5	Engine – Oil Tank Installation	79.4
79-7	Engine – Oil Cooler Installation	79.6
79-9	Engine – Oil Lines Installation	79.8

CHAPTER 90 – POLICE VERSION

<u>Figure</u>	<u>Title</u>	<u>Page</u>
—	R66 Police Equipment	90.iv
—	R66 Police Equipment	90.vi
90-1	C060-3 Interior Light Installation	90.0
90-3	C813-4 Transceiver Installation (G070 Console)	90.2
90-5B	C813-4 Transceiver Installation (G060 Console)	90.6
90-7	C813-2 Transceiver Installation	90.6
90-7B	G460-2 Audio Control Installation	90.7A
90-9	G460-1 Audio Control Installation	90.8
90-13	C823-16 Dual Audio Control Installation	90.12
90-15	C849-4 Blower Installation	90.14

CHAPTER 90 – POLICE VERSION (Cont'd)

<u>Figure</u>	<u>Title</u>	<u>Page</u>
90-17	F051-1 Camera System Installation – Gimbal Fairing and Cover	90.16
90-19	F051-1 Camera System Installation – Gimbal and Lower Support Assembly	90.18
90-21	F051-1 Camera System Installation – Upper Gimbal Support Assembly	90.20
90-23	F051-1 Camera System Installation – Electronics Control Unit & Controller Assy.	90.22
90-25	F060-2 Intercom System Installation – Audio Control	90.24
90-27	F060-2 Intercom System Installation – Floor Switches	90.26
90-29	F079-1 PA/Siren System – Speaker Installation	90.28
90-31	F079-1 PA/Siren System – Components Installation	90.30
90-33	F081 Searchlight Installation – Gimbal and Gearmotor Assemblies	90.32
90-37	F081 Searchlight Installation – SLASS ECU and Junction Box Assembly	90.36
90-39	F081 Searchlight Installation – Control Assembly.	90.38
90-39B	F818 GTN 6XX-series GPS/NAV/COM Installation (G070 Console)	90.39A
90-41	G415-1 DVR Installation (Optional)	90.40
90-43	G416-5 Monitor Installation	90.42
90-45B	G416-4 Monitor Installation	90.45A
90-47	G416-1 Monitor Installation	90.46
90-51	Pilot's Side Console – GDU 1060 TXi Display	90.50
90-53B	Pilot's Side Console – GPS/NAV/COM Installation	90.53A
90-55	G423-1 Aux Electrical System – 28-to-14V Converter & CB Panel	90.54
90-57	G423-1 Aux Electrical System – Harness Assembly	90.56
90-59	G423-1 Aux Electrical System – Relay	90.58
90-61	G425-1 Wall Installation	90.60
90-63	G437-1 Lojack Installation – Display	90.62
90-65	G437-1 Lojack Installation – Receiver	90.64
90-67	G437-1 Lojack Installation – Antennas	90.66
90-69	G608 Mapping System – Computer Installation	90.68
90-71B	G608-7/-8 Mapping System – Computer Installation	90.71A
90-73	G608 Mapping System – Components Installation	90.72

CONTENTS

CHAPTER 90 – POLICE VERSION (Cont'd)

90-75	G608-1 Mapping System Installation	90.74
90-77	G685-1 Aux Strobe Installation	90.76
90-79	G749-1 Aft Console Installation	90.78

CHAPTER 92 – E.N.G. VERSION

<i>Figure</i>	<i>Title</i>	<i>Page</i>
–	Electronic News Gathering Equipment	92.iv
–	Electronic News Gathering Equipment	92.vi
92-1	A826 FM Transceiver Installation	92.0
92-5	Micro Camera Installation – Windshield	92.4
92-7	Micro Camera Installation – Cabin	92.6
92-9	Micro Camera Installation – Horizontal Stabilizer	92.8
92-11	Micro Camera Controller Installation	92.10
92-13	Remote Transmit Switch Installation	92.12
92-15	G425-1 Wall Assembly Installation	92.14
92-17	C445 Auxiliary Circuit Breaker Panel Installation	92.16
92-21	G448 Aft Monitors Installation	92.20
92-25	G449 Forward Monitors Installation	92.24
92-27	Camera and Gimbal Installation	92.26
92-29	Camera and Gimbal Fairing	92.28
92-31	Laptop and Cable Assembly Installation	92.30
92-33	E003 Auxiliary Box Installation	92.32
92-35	HD Microwave System – Controllers	92.34
92-37	HD Microwave System – Transmitter	92.36
92-39	HD Microwave System – Pod Antenna	92.38
92-41	Transponder Antenna Installation	92.40
92-43	TV and Scanner Antenna Installations	92.42
92-45	Aft Console Assembly	92.44
92-49	FM Transceivers Installation	92.48
92-51	Scanner Installation	92.50
92-53	Talent Lights Installation	92.52
92-57	TV Receiver Provision Installation	92.56
92-61	Geneva Audio – Forward Audio Panels	92.60
92-65	Geneva Audio – Aft Audio Panels	92.64
92-67	Geneva Audio – Digital Router	92.66
92-69	Video Components Installation	92.68
92-73	DVR/Monitor Installation	92.72
92-75	G459 Aux Electrical System – Harness Assy.	92.74
92-79	E.N.G. Wire Harness Installation	92.78

CHAPTER 95 – INSTRUMENT SYSTEM

95-1	Garmin G500H Console – Instruments	95.0
95-5	Garmin G500H Console – GDU 620 Display	95.4
95-7	Garmin G500H Console – GDU 700L TXi Display	95.6
95-9	Garmin G500H Console – GDU 1060 TXi Display	95.8
95-11	Garmin G500H Console – Pitot/Static Tubes	95.10
95-13	Garmin G500H Console – Components	95.12
95-17	Aspen PFD Installation	95.16
95-19	Aspen PFD Installation – Pitot/Static Tubes	95.18
95-21	Aspen PFD and MFD Installation	95.20
95-25	Aspen PFD and MFD Installation – Pitot/Static Tubes	95.24
95-27	Eight-Instrument Console – Upper Panel	95.26
95-31	Eight-Instrument Console – Lower Panel	95.30
95-33	Eight-Instrument Console – Components	95.32
95-35	Seven-Instrument Console – Upper Panel	95.34
95-39	Seven-Instrument Console – Lower Panel	95.38
95-43	Nine-Instrument Console Assembly	95.42
95-45	Compass Installation	95.44
95-47	Pitot/Static Tubes Installation	95.46
95-51	Heated Pitot Installation	95.50

CHAPTER 96 – ELECTRICAL SYSTEM

<i>Figure</i>	<i>Title</i>	<i>Page</i>
96-1	B237-7 (Standard) Battery Installation	96.0
96-3	B237-8 (Large) Battery Installation	96.2
96-5	Battery Relay Installation	96.4
96-9	Lithium-Ion Battery Installation	96.8
96-11	Lithium-Ion Battery Circuit Back-up Batteries	96.10
96-13	External Power Plug Installation	96.12
96-17	Starter-Generator and External Power Relay Installation	96.16
96-21	Circuit Breaker Panel	96.20
96-23	Hourmeter & Collective-Activated Switches Installation	96.22
96-27	Accessory Bars Installation	96.26
96-31	Starter Generator Relay and Battery Minder Installation	96.30
96-35	Lithium-Ion Battery Indicator Lights	96.34
96-37	Anti-ice Switch installation	96.36
96-39	G198-1 Annunciator and Related Sensors	96.38
96-41	Engine Fire, Cowl Door, and Low Voltage Sensors	96.40
96-43	Electrical Relay Installation	96.42

CONTENTS

CHAPTER 97 – AVIONICS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
97-1	Garmin G500H EFIS – GTN 600/700-series GPS	97.0
97-5	Garmin G500H EFIS – GDC 74H Air Data Computer	97.4
97-9	Garmin G500H EFIS – GRS 77H AHRS	97.8
97-13	Garmin G500H EFIS – GMU 44 Magnetometer	97.12
97-15	Radar Altimeter Indicator – Eight-Instrument Console	97.14
97-17	Radar Altimeter Indicator – Seven/Nine-Instrument Console	97.16
97-19	Radar Altimeter – System Installation	97.18
97-21	Garmin GTX 33 Transponder Installation	97.20
97-23	Garmin GDL 69A XM Receiver Installation	97.22
97-25	Avionics Panel Switches and Garmin GTR 225B COM Radio Installation	97.24
97-29	Garmin GDL 88 Receiver (ADS-B) Installation	97.28
97-31	Garmin GTX 3XX Transponder and Blind Encoder Installation	97.30
97-33	Pilot's Side Console – Garmin GTN 700-Series GPS	97.32
97-37	Pilot's Side Console – Garmin GTN 600-Series GPS (Single)	97.36
97-39	Pilot's Side Console – Garmin GTN 600-Series GPS (Dual)	97.38
97-41	Pilot's Side Console – Garmin 500-Series GPS	97.40
97-45	Pilot's Side Console – Garmin 400-Series GPS	97.44
97-49	Audio Control Installation	97.48
97-51	Dual Audio Control Installation	97.50
97-53	Audio and Intercom Switches Installation	97.52
97-57	Standard Headset Jacks Installation	97.56
97-59	Bose Headset Jacks Installation	97.58
97-61	Bose Headset Jacks Installation	97.60
97-63	Transponder and Blind Encoder Installation	97.62
97-65	ADF System Installation	97.64
97-67	VOR Indicator Installation	97.66
97-69	Spidertracks Provision Installation	97.68

CHAPTER 99 – SPECIAL TOOLS

<u>Figure</u>	<u>Title</u>	<u>Page</u>
99-1	Field Kits	99.1
99-3	Technical Publications	99.3
—	Special Tools	99.5
99-7	Shipping Crates	99.6
99-9	Shipping Crates	99.8

CHAPTER 100 – REVISION LOG

<u>Figure</u>	<u>Title</u>	<u>Page</u>
—	Revision Log	100.1

APPENDIX A – ALPHABETICAL INDEX

<u>Figure</u>	<u>Title</u>	<u>Page</u>
—	Alphabetical Index	A3

APPENDIX B – NUMERICAL INDEX

<u>Figure</u>	<u>Title</u>	<u>Page</u>
—	Numerical Index	B3