

R22 SERVICE LETTER SL-65A

(supersedes R22 SL-65)

R44 SERVICE LETTER SL-51A

(supersedes R44 SL-51)

R66 SERVICE LETTER SL-10A

(supersedes R66 SL-10)

DATE: 13 October 2014 **REV A:** 07 November 2016

TO: R22, R44 & R44 II, and R66 Owners, Operators, and Maintenance Personnel

SUBJECT: B526 (TORX Plus®) Truss Head Screws

BACKGROUND: B526 screws may be used to secure cowlings and access panels. B526 screws incorporate a TORX Plus® recess for reduced fastener cam-out, and a truss head to reduce damage to cowlings and panels from repeated tightening. A B527-08 nylon washer may be used under a B526 screw head to further protect thin or painted surfaces.

COMPLIANCE PROCEDURE:

B526 screws are interchangeable with MS27039C080_ screws used to secure cowlings and access panels as follows:

| <u>PART:</u> | <u>INTERCHANGEABLE WITH:</u> |
|------------------------------|------------------------------|
| MS27039C0806 screw | B526-6 screw |
| MS27039C0807 screw | B526-8 screw |
| MS27039C0808 screw | B526-8 screw |

B526 screws are interchangeable with AN525-832R_ & AN526C832R_ screws as follows:

| <u>PART:</u> | <u>INTERCHANGEABLE WITH:</u> |
|--|------------------------------|
| AN525-832R6 or AN526C832R6 screw | B526-6 screw |
| AN525-832R7 or AN526C832R7 screw | B526-8 screw |
| AN525-832R8 or AN526C832R8 screw | B526-8 screw |

| |
|--|
| <p>NOTE</p> <p>B526 screws are compatible with T20 or 20IP drivers.</p> |
|--|

APPROXIMATE COST:

- (1) B526-6 screw \$ 1.10
- (1) B526-8 screw \$ 1.10
- (5) B527-08 washer \$ 1.25