R44-series Pop-Out Floats Skid Extension Upgrade Installation Kit Instructions

This kit is for first-time replacement of discountinued C945-1 (LH) & C945-2 (RH) Extension Assemblies, which are replaced by C945-13 (LH) & C945-14 (RH) Lightweight Extension Assemblies.

NOTE

Visit www.robinsonheli.com to verify kit instructions are current revision. Review instructions before installation; contact RHC Technical Support with questions. Verify kit contents match list; contact RHC Customer Service if parts are missing or damaged.

ITEM	PART NUMBER	KIT CONTENTS	QTY	
1	KI-252-1Instr.	Kit Instructions	1	
2	A142-1	Screw	8	
3	C014-31A	Skid Extension, Float–LH Includes: [1] B202-1 Plug Assembly [1] C945-13 Extension Assembly, LH [1] C946-2 Cap Assembly [4] NAS9301B-4-02 Rivet	1	
4	C014-31B	Skid Extension, Float–RH Includes: [1] B202-1 Plug Assembly [1] C945-14 Extension Assembly, RH [1] C946-2 Cap Assembly [4] NAS9301B-4-02 Rivet	1	
5	MS27039C1-07	Screw	4	
6	MS27039C1-08	Screw	4	

Consumables

Refer to R44 Maintenance Manual (MM) § 1.400 for approved materials list.

- A257-9 Anti-seize
- B270-1 Sealant
- · Flat Black paint

Kit Instructions

- 1. Hoist helicopter per R44 MM § 1.220.
- 2. Refer to Figure 1 and R44 Illustrated Parts Catalog (IPC) Figure 32-19. Remove and retain two C944-3, C944-5, and C944-4 float retainer strips from each skid tube and extension.
- 3. Carefully position detached portion of one pop-out float to access aft strut attachment hardware.

Kit Instructions (continued)

CAUTION Do not kink inflation hose.

- 4. Remove and discard hardware securing aft skid shoe to skid tube. Retain skid shoe.
- 5. Place a support under aft end of skid tube. Remove sealant, bolts, and washers securing aft strut assembly to skid tube. Remove skid extension.
- 6. Clean interior of skid tube. Insert appropriate new C014-31A or C014-31B float skid extension and align fastener holes.
- 7. Position skid shoe and loosely install (4) A142-1 screws (provided). Install strut attachment hardware. Standard torque bolts per R44 MM § 1.320. Secure A142-1 skid shoe screws.
- 8. Repeat steps 3 thru 7 on opposite side.
- 9. Remove skid tube support(s), lower helicopter, and remove lifting fixture (or rope) from main rotor hub.
- 10. Cover bolt heads of outboard bolts securing struts to skids with B270-1 sealant to prevent chafing float. Touch up paint at mating surfaces of skid extension and skid. Allow sealant and paint to dry.
- 11. Refer to Figure 1. Align holes in C944 retainer strips, float covers, float girts, and skid extension, installing hardware as required to achieve 1-4 threads exposed beyond nut; replace two aft-most installation hardware with (2) MS27039C1-08 screws and (2) MS27039C1-07 screws per Figure 2. Special torque hardware to 25 in.-lb wet with A257-9 anti-seize (threads only).
- 12. Tuck in lacing cord ends and secure hook and loop fasteners. Secure hook and loop fasteners at end caps. Verify all fasteners are properly secured.
- 13. Revise helicopter's Weight and Balance Record in R44 Pilot's Operating Handbook (POH) Section 6 to reflect this installation by incorporating the following data:

Remove:

Item	Weight	Long. Arm	Long. Moment	Lat. Arm	Lat. Moment
C945-1 (LH) & -2 (RH) Skid Ext. Assembly	-8.18 lb	141.8 in.	-1159.9 inlb	0 in.	0 inlb

Install:

Item	Weight	Long. Arm	Long. Moment	Lat. Arm	Lat. Moment
C014-31A (LH) & -31B (RH) Float Skid Ext. Assembly	+5.64 lb	137.0 in.	772.7 inlb	0 in.	0 inlb

14. Make appropriate maintenance record entries.

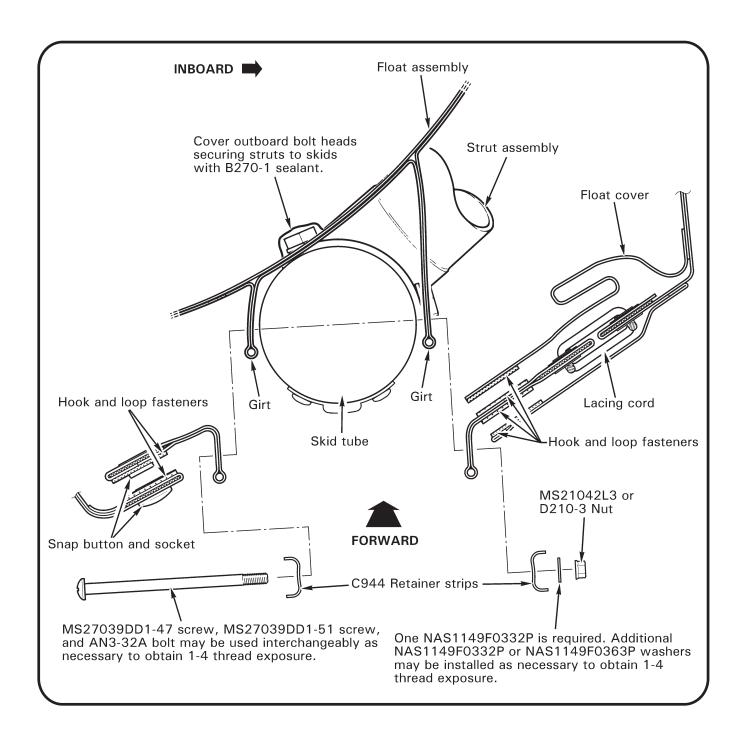


FIGURE 1

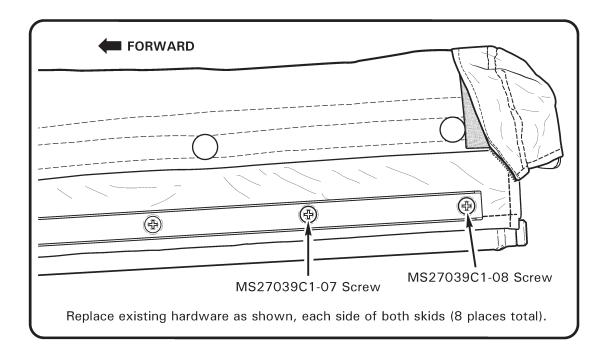


FIGURE 2