24747 Crenshaw Blvd., Torrance, California 90505

■ PHONE (310) 539-0508 ■ FAX (310) 539-5198

13 May 93 Revised 30 Jun 93

KI-81

A795-4 ONE-PIECE LOCKING PIN INSTALLATION KIT FOR REMOVABLE TAIL ROTOR PEDALS

Kit Contents:

1. A795-4 Pin Assy - Tube Locking 2 each 2. MS24665-132 Cotter Pin 2 each 3. Installation Instructions 1 each

Instructions:

- 1. Remove both removable tail rotor pedals.
- 2. Remove one A795-1 clip, one MS20392-2-33 flat head pin, one AN960PD10L washer and one MS24665-132 cotter pin from each removable pedal's receptacle.
- 3. Reinstall one MS20392-2-33 flat head pin and one AN960PD10L washer in their original position on each removable pedal's receptacle and secure with a new MS24665-132 cotter pin.
- 4. Reinstall both removable tail rotor pedals.
- 5. Hold one pedal firmly in the fully-engaged position. Using a suitable drill ("G" size recommended) equipped with a drill stop, enlarge the original 0.141 inch diameter hole to 0.265/0.272 inch diameter. Repeat this step for the remaining pedal.
- 6. Remove both removable pedals and deburr the four enlarged holes.
- 7. Insert an A795-4 pin assembly bend-first into each removable pedal and position the pin in the 0.265/0.272 inch diameter hole. The apex of the spring bend must be toward the top of the pedal.
- 8. Install the removable pedals and verify proper engagement and locking in the pedal's receptacle.
- 9. Remove the landing lights and clean any fallen debris from inside the chin. Reinstall landing lights.
- 10. Record this installation in the aircraft's maintenance record.